

Botany Evolution LLC

2510 Kirby Circle NE

Palm Bay, FL 32945

321-802-4583

Certificate Of Analysis**Sample Identification Information**Date of Analysis 9/14/2020Sample: S0939Product Name INSTANT CEREMONIALLot# VBE200909CICountry of Origin VANUATUCountry of Processing USAManufacture Date 09/09/20Best By Date 09/09/23**General Product Specifications**Product Species Piper MethysticumPart Used RootCommon Names Kava kava, Awa, YagonaAppearance Yellow, beige powder**Analyzed Characteristics****Specification****Result****Test Method**Standardization

2-17% Kavalactones

6.45%

HPLC

Identification

Complies by HPLC

Conform

HPLC

Kavalactone Profile

Noble

PASS

HPLC

Mesh Size

60-30

60

Sieve

Color

Beige to Yellow

Pass

Visual

Odor

Pass

Organoleptic

Taste

Pass

Organoleptic

Chemotype

243561

HPLC

K/DHM

2.1

Calculation

Kavalactones	Code	Peaks Ref. (elution order)	Correction Factor	Area *	Area %	Corrected Kavalactones	Chemotype Identifier
Standard Kavain	K			2348.402			
Methysticin	M	1	2.21	548.27	9.87%	0.67%	6
Dihydromethysticin	DHM	2	3.38	416.498	7.50%	0.76%	5
Kavain	K	3	1	2874.733	51.73%	1.62%	4
Dihydrokavain	DHK	4	3.08	759.194	13.66%	1.80%	2
Desmethoxyyangonin	DMY	5	2.52	376.907	6.78%	0.58%	1
Yangonin	Y	6	3.12	581.338	10.46%	1.03%	3
Kavalactones			Total:	5556.940	100.00%	6.45%	243561

*See data in attachment HPLC1100 Agilent Certificate with Chromatogram graph.

This result are in house tested and the best of our knowledge and experience. Using calibrated equipment.

We are dedicated to offer the best Quality of Botanical products on the market. We test and stand behind our products.

Disclaimer* the test results are accurate to the best of our knowledge and are based upon reputable laboratory and industry standard testing methods.

These results should not be used as a final determination for use in a finished product. It is recommended that you verify these test results with an

in house quality control department or obtain an additional independent third party lab to verify that this material meets specifications

Botany Evolution, its board of directors, contract laboratories, employees, and affiliates are held harmless from any loss or damages resulting from the

use or misuse of this document. The appropriate use of this product is the sole responsibility of the user of the purchasing party.

Chemist

Mustie Young

Date

9/17/20

SAMPLE S0939
Vial 12

0.75479g/50mL

wavelength 246 nm


C:\CHEM32\1\DATA\KAVA_9_15_2020_15MINSTDTESTMETHOD 2020-09-15 16-24-24\012->
SEQUENCE C:\CHEM32\1\DATA\KAVA_9_15_2020_ ->

Injection date 9/15/2020

Injection time 8:27:42 PM

Acq. operator KRISTL

Method C:\CHEM32\1\METHODS\KAVA15MIN STD TEST.M

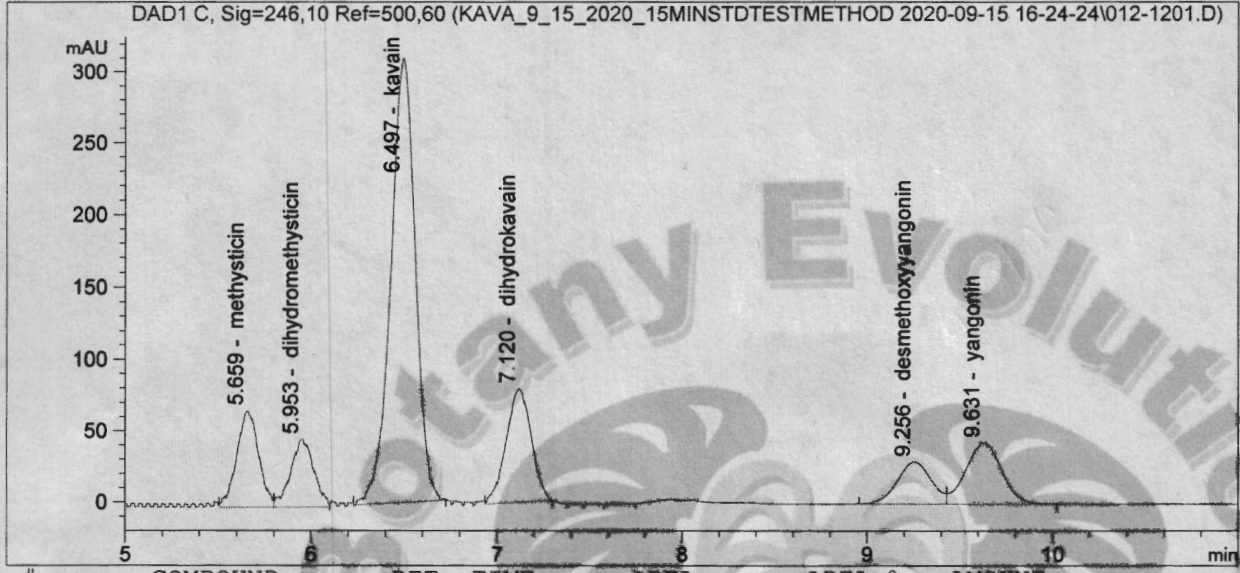

#	COMPOUND	RET. TIME	AREA	AREA %	AMOUNT
1	methysticin	5.659	548.270	9.87	0.000
2	dihydromethysticin	5.953	416.498	7.50	0.000
3	kavain	6.497	2874.733	51.73	0.000
4	dihydrokavain	7.120	759.194	13.66	0.000
5	desmethoxyyangonin	9.256	376.907	6.78	0.000
6	yangonin	9.631	581.338	10.46	0.000

9/17/20
y